

OPERATING INSTRUCTIONS EN

IO-WMS-1978
(09.2020/1)

AWDI814D



ONLY USE THE APPLIANCE WHEN YOU
HAVE READ AND UNDERSTAND THE
OPERATING
INSTRUCTIONS

WASHER-DRYER

CONTENTS

ECOLOGY IN PRACTICE	3
BASIC INFORMATION	5
SAFETY AND GERMENT CARE LABELS	6
INSTALL THE APPLIANCE	18
PRODUCT DESCRIPTION	23
TROUBLESHOOTING	29
PRACTICAL TIPS ON WASHING	32



In accordance with European Directive 2012/19/EU and Polish legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container.

This marking indicates that the appliance must not be disposed of together with other household waste after it has been used. The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes. Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

ECOLOGY IN PRACTICE

For many years, Amica has consistently pursued pro-ecological policy. Concern for the environment is as important for us as the use of modern technology.

The development of technology has enabled our factories to become more environmentally friendly – we use less and less water, electricity and less waste water and solid waste is generated in the production.

A lot of attention is paid to materials used in production. We strive to use only those that do not contain harmful substances and make recycling and safe disposal possible after use.



Dear customer!

Thank you for choosing an Amica product. For years we have delivered high-quality appliances, so that household chores become a real pleasure. Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. We also endeavour to make sure that modern technology in Amica products always goes hand in hand with a unique design.

Before using the appliance, please carefully read these Operating Instructions. Follow these instructions to avoid improper use and ensure long and reliable operation of the appliance. Learn the principles of the safe use to avoid accidents.

Store these operating instructions in a safe place to use them for reference whenever needed. These Operating Instructions contain all the necessary information that will make the use of your Amica appliance simple and fun. We also encourage you to find out more about other Amica appliances.

We hope using your new appliance is a pleasure.

Amica

BASIC INFORMATION



This appliance is intended for domestic use only to wash/dry textiles and clothes designed to be machine washed in a detergent bath.

Before plugging the appliance into the mains, remove the safety packaging and ensure the machine is level. The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

USAGE

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The appliance should not be operated by children or anyone who has not read the instructions.



Temperatures below 0°C can damage the appliance! In the event of the appliance being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

MANUFACTURER'S DECLARATION

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive, 2014/35/EU,
- Electromagnetic Compatibility (EMC) Directive 2014/30/EE,

and has been marked with the CE symbol and issued with a declaration of compliance made available to market regulators.

The risk of death!	<p>This appliance should not be used by children under 8 years of age, persons with reduced physical or mental capabilities, and persons who do not have sufficient skills to use this type of appliance. Such persons should be offered proper supervision or instructions on safe handling of appliance and related risks. Children must not play with the appliance or perform any maintenance-related activities. Children under 3 years of age must be kept away from the appliance unless continuously supervised.</p>
	<p>Children could get caught inside the appliance and get into a life-threatening situation.</p>
Risk of suffocation!	<p>If you allow children to play with the packaging/film or parts of the package, they can get entangled or put packaging over their head and risk suffocation. Keep packaging/plastic film or parts of packaging out of reach of children.</p>
Risk of poisoning!	<p>Washing detergents and fabric softeners can cause poisoning if ingested. In the event of accidental ingestion, consult your doctor. Washing detergents and fabric softeners should be stored out of the reach of children.</p>

Risk of burns!	If laundry is washed at high temperature, door glass becomes hot. Prevent children from touching the hot door.
Eye/skin irritation!	Contact with detergents and softeners may cause eye or skin irritation. In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener. Washing detergents and fabric softeners should be stored out of the reach of children.
Risk of electric shock. Risk of fire/damage to property/appliance!	<p>If the appliance is not correctly installed, it may be dangerous. Make sure that:</p> <p>Mains voltage corresponds to the voltage indicated on the appliance nameplate (identification plate)</p> <p>The current load and required fuse protection are specified on the nameplate.</p> <p>The appliance is connected to AC source only through a properly installed and grounded wall socket in accordance with national standards.</p>

<p>Risk of electric shock. Risk of fire/damage to property/appliance!</p>	<p>The power cord and the grounded wall socket fit together and the grounding system has been properly installed.</p>
	<p>Power cord cross section is sufficient.</p>
	<p>Power plug is always accessible.</p>
	<p>If a miniature circuit-breaker is used, always use a circuit-breaker with the following designation:  This symbol is the only way to make sure that all the necessary requirements have been met.</p>
<p>Risk of electric shock. Risk of fire/damage to property/appliance!</p>	<p>If the power cord is modified or damaged, it may result in electric shock, short circuit or fire due to overheating.</p> <p>The power cord must not be kinked, crushed or modified or come in contact with any heat source.</p>

<p>Risk of fire/damage to property/appliance!</p>	<p>The use of extension cords or splitters may result in fire due to overheating or short circuit. Connect the appliance directly to a properly grounded wall socket. Do not use extension cords, splitters or power strips.</p>
<p>Health risk / risk of damage to property/appliance!</p>	<p>The appliance may vibrate or displace while in use, potentially causing injury or property damage. Set the appliance on a clean, level and hard surface using a level spirit.</p> <p>If any protruding items are caught by the appliance (e.g. doors) when trying to lift or move it, the item may come off and cause injury. Do not grasp any protruding parts of the appliance to move it.</p>
<p>Risk of injury!</p>	<p>The appliance is very heavy. Lifting may cause injury. Do not lift this appliance by yourself.</p>

Risk of injury!	<p>This appliance has sharp edges that can cause a hand injury. Do not hold the appliance by sharp edges. Only lift the appliance after you put on the gloves.</p>
	<p>If the hoses or electrical cables are not routed properly, you can trip and sustain an injury. Rout hoses and cables so that they do not constitute a tripping hazard.</p>
Important! Damage to property/ appliance	<p>If the water level is too high or too low, the appliance may not work properly, which can cause damage to property/appliance. Make sure that water is supplied under pressure of minimum 100 kPa (1 bar) and not exceeding 1000 kPa (10 bar).</p>
	<p>If the water supplying hoses have been modified or damaged, this can cause damage to property/appliance. The water supply hoses must not be kinked, crushed, modified or cut.</p>
	<p>The use of third-party hoses to connect the appliance to water supply can cause damage to property or the appliance.</p>

<p>Important! Damage to property/ appliance</p>	<p>Use only hoses supplied with the appliance, or the original hoses up designed for the appliance.</p>
<p>Risk of explosion/fire hazard!</p>	<p>The appliance is secured for transport with transit bolts. If you don't remove transit bolts before using the appliance, the appliance may be damaged. Remove all transit bolts before using the appliance for the first time. Make sure you keep transit bolts in a safe place for future use. If the appliance will be transported, to avoid any damage, you must reinstall the transit bolts.</p> <p>Laundry washed with detergents that contain solvents and thinners pose a risk of explosion in the drum.</p> <p>Thoroughly rinse laundry with water before washing in the washing machine.</p>

Risk of poisoning!	<p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p>
Risk of injury!	<p>Do not lean against/sit on open appliance door as this can lead to the appliance tipping over. Do not lean against the open door of the appliance.</p>
	<p>Climbing on the appliance may cause the worktop to break or collapse and lead to an injury Do not climb on the appliance.</p>
	<p>Reaching into the drum while is still rotates could injure your hand. Wait until the drum has come to a standstill.</p>
Risk of scalding!	<p>When washing at high temperature, there is a risk of scalding as a result of contact with hot water and detergent (e.g. when you drain the water into the sink).</p> <p>Do not put your hands in hot water with detergent solution.</p>

Eye/skin irritation!	<p>Fabric detergents and softeners may splash, if the detergent drawer remains open during operation.</p> <p>In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener.</p> <p>In the event of accidental ingestion, consult your doctor.</p>
Important! Damage to property/ appliance	<p>If the amount of laundry in the washing machine exceeds the maximum load, it may not operate properly or cause damage to property or the appliance.</p> <p>Do not exceed the maximum load capacity of dry laundry.</p> <p>Do not exceed the maximum load capacity for individual wash programmes.</p>
	<p>Adding too much detergent or fabric softener may cause damage to property or the appliance.</p> <p>Use fabric detergent/softener according to the manufacturer's instructions.</p>

The risk of death!!	The appliance is powered by electricity. Touching live elements poses a risk of electric shock. Therefore, remember:
	Turn off the appliance: Unplug the appliance from the wall outlet.
	We never grab the plug with wet hands.
	When pulling the plug, always hold the plug, not the power cord, because this can damage the power cord.
	Do not make any technical modifications to the appliance or its components.
	Any repairs or other work on the appliance must only be performed by our service facility or by an electrician. The same applies to replacing the power cord (if necessary).
	You can order a spare power cord in our service centres.

<p>Risk of poisoning!</p>	<p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p>
<p>Risk of electric shock / damage to property / appliance!</p>	<p>If water penetrates into the appliance, it may cause a short circuit.</p> <p>Never use pressure washer or steam cleaner to clean the appliance.</p>
<p>Health risk / risk of damage to property/appliance!</p>	<p>The use of third-party spare parts and accessories is dangerous and may cause injury, damage to property or appliance.</p> <p>For safety reasons, use original spare parts only.</p>
<p>Important! Damage to property/ appliance</p>	<p>Fabric cleaners, impregnating agents, stain removers, pre-wash agents, etc. may damage the appliance outer surface.</p> <p>Therefore, remember:</p>

Important! Damage to property/ appliance	Make sure there is no contact with the appliance surface.
	Clean the appliance with a damp cloth only.
Dry	Do not dry clothes that have not been washed.
	Do not dry chemically washed garments or clothing, where stains were removed by chemicals.
	Do not dry clothes soiled with substances such as cooking oil, crude oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax.
	Before loading the clothes into the dryer, remove such contamination in hot water, using a large amount of washing detergent.
	Do not dry articles made of rubber foam, latex, water-resistant fabrics, raincoats, rubber mats, thermally formed products, clothing or pillows padded with foam rubber, as they may melt and damage other items or even damage the appliance. Please carefully read these operating instruction before installing the appliance. Damage caused by improper connections or use of the appliance is not covered by the warranty.
	NOTE: There is a cooling phase at the end of the drying cycle. Therefore, do not turn off the appliance before the end of the drying cycle. Otherwise, quickly remove and hang clothes to cool.

UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS

Washing				
	boil at 90°C	normal wash at 60°C	normal wash at 40°C	Do NOT wash!
				
	delicate		handwash	
Chemical cleaning				
	all solvents	all except TRI	petrol only	NO Dry clean!
Tumble dryer				
	normal	low	high	Do NOT dry!
Ironing				
	110°C	150°C	200°C	Do NOT Iron





Always pay attention to the symbols on garment labels when choosing a washing programme.

INSTALL THE APPLIANCE

1

Remove the transit bolts
(keep the bolts for future use, e.g. when moving house).

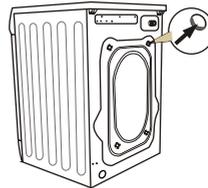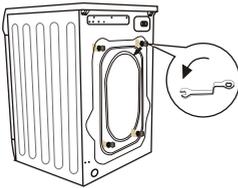

- unscrew the 4 transit bolts with a spanner,
- remove the rubber and plastic transport brackets from the sockets along with the washers and bolts.
- stop up the holes with the stoppers enclosed in the accessories bag.





Caution: the transit bolts **MUST** be removed before the appliance is used!

2

Position and level the appliance

- place the appliance on a solid, level surface,
- Level the appliance by adjusting the legs (1)

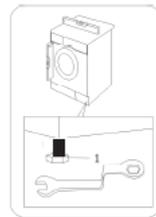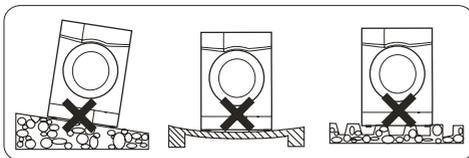


After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!

3

Connect the water supply

- Use only the new hoses supplied with the machine. Do not re-use hoses.

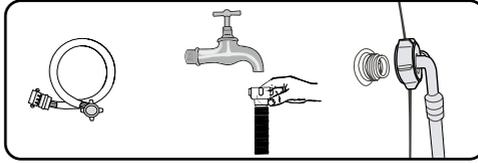

- A supply hose with seals is inside the drum of the machine.
Water pressure min 0.01 MPa (0.1 bar), max 1 MPa (10 bar).

- 1). after connecting, make sure the hose is not twisted
- 2) after connecting the hose and the valve, check they are sealed tight
- 3). regularly check the condition of the hose.




Supply the machine with cold water only.


4

Water drain


- The drain hose is at the back of the machine. Fix the drain hose so that it does not move while the appliance is in operation. If necessary, use the elbow (1).

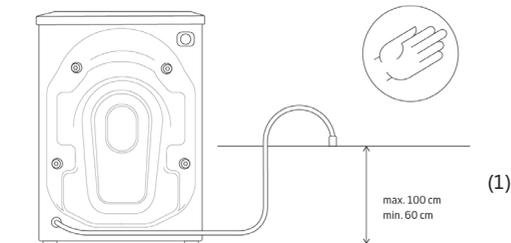



Connection on the left

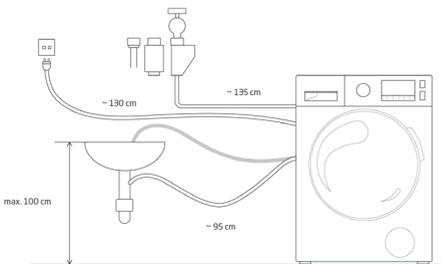

Connection on the right

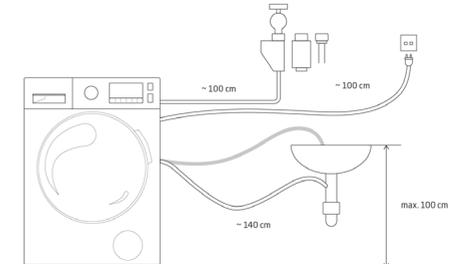

Connect to power supply

 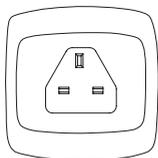


- Electrical wall outlet where the appliance is connects must be in a visible and accessible place,
- Only plug the appliance into a properly installed socket with an earthing pin,
- Do not use an extension cord to connect the appliance,
- in the event of the power cord being damaged, it must be replaced by an authorised service technician,
- the electrical system to which the appliance is to be connected must be protected with a 10 A fuse.

Prepare to wash:

- Small items such as coins, paper clips, needles, etc., may damage the laundry and the appliance, you should therefore follow a few important recommendations:
 - 1). Empty pockets
 - 2). Remove all metal items
 - 3.) Delicate items such as bras or stockings should be washed in protective mesh laundry bag
 - 4). Close zippers and fasten buttons
 - 5). Remove any foreign objects from the device (e.g. wires, underwires).

FEATURES AND COMPONENTS

DESCRIPTION OF THE APPLIANCE

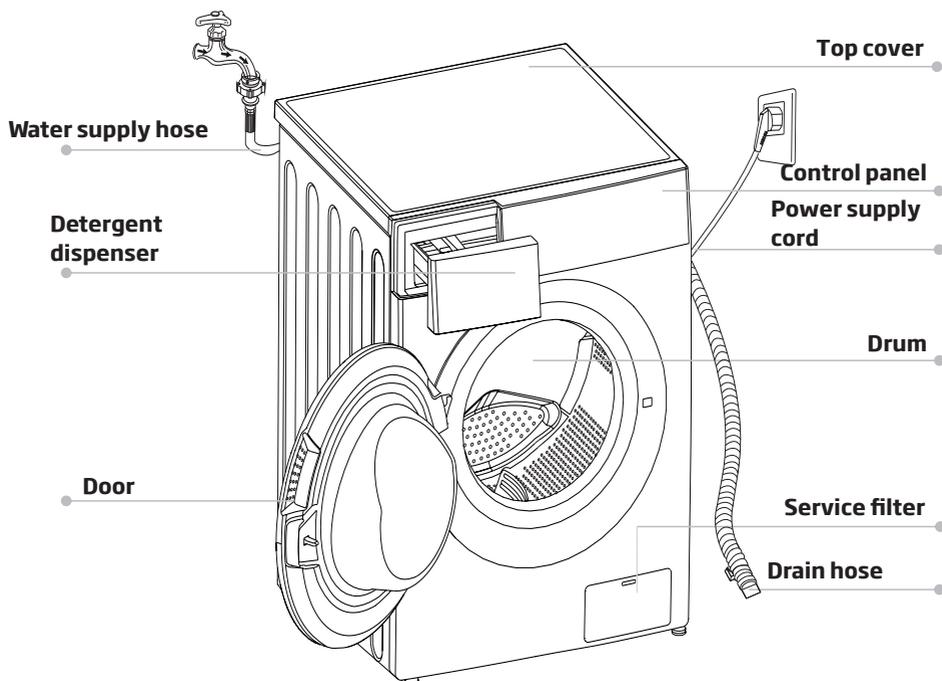


Quick Start

Note!

- Before washing, please make sure it's installed properly.
- Before washing at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows.

1. Before Washing

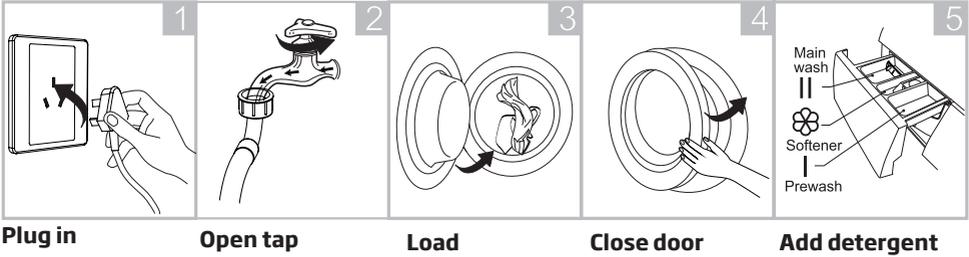

Plug in

Open tap

Load


Close door

Add detergent

Note!

Detergent need to be added in "case I" after selecting pre-washing for machines with this function.

2. Washing

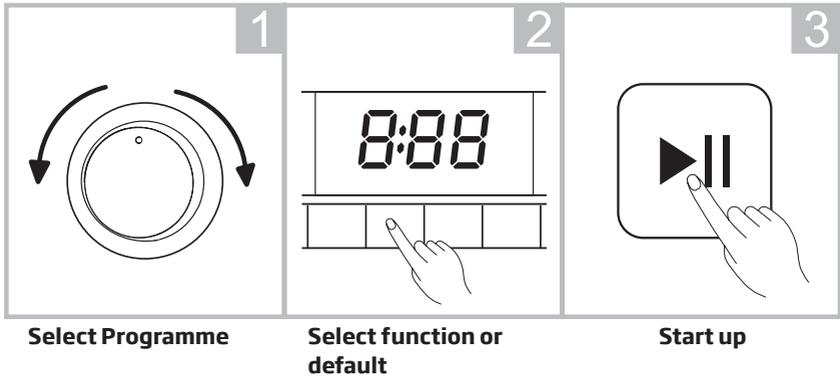

Select Programme

Select function or
default

Start up



Note!

If default is selected, step 2 can be skipped.

3. After Washing

"End" on display.

DISPLAY AND CONTROL PANEL

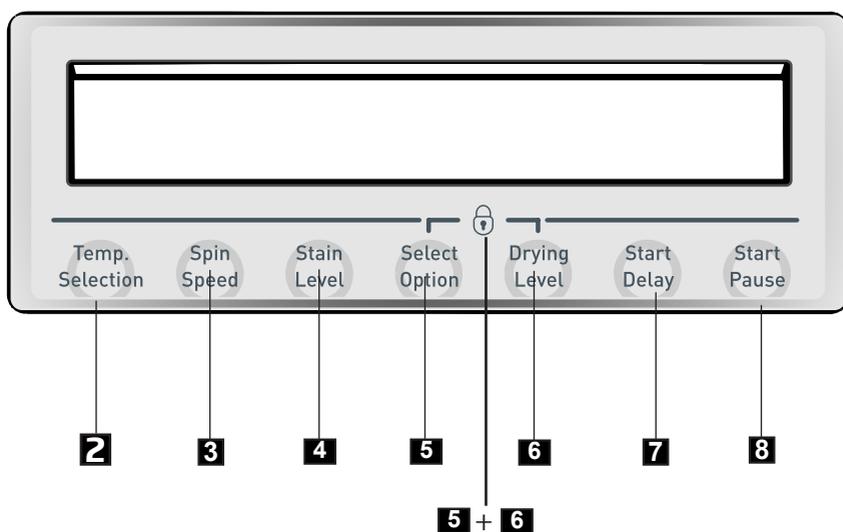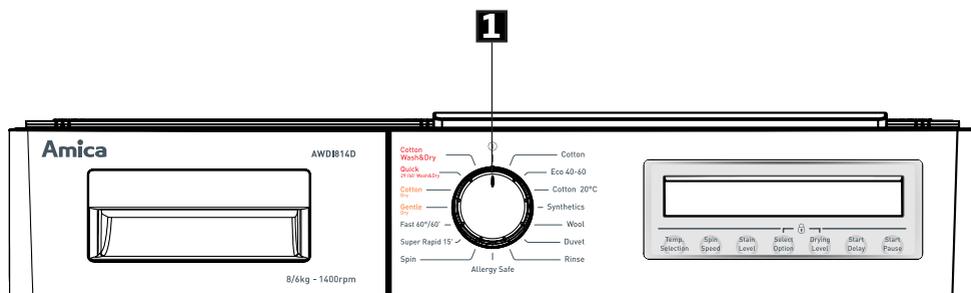

1. Programme selection knob
2. Temperature Selection button
3. Spin speed selection button
4. Stain Level selection button
5. Select Option (Pre-wash/Extra Rinse) button
6. Drying Level selection button
7. Start Delay selection button
8. START/PAUSE selection button
- 5+6 Child Lock

1

Programme selector dial

- Choose the appropriate wash programme as required, depending on the soil level, and type and amount of laundry loaded, which ensures better results and more effective washing. Once the wash programme is started, turning the programme selector knob to another position is indicated by a beep, however it does not change the previously selected programme.

2

Temperature selector button

- This button allows the washing temperature to be set. Press this button to display water temperature settings available for a given programme or an option for washing in cold water (no heating). Depending on the selected programme, the display shows the following temperatures: --°C(cold water) -30°C-40°C-50°C-60°C-70°C-80°C-90°C. For the Eco programme you can select the cold water option or 20°C on the display.

3

Spin speed selector button

- Press this button to set the spin speed when water is being pumped out of the washing machine. Press the button to change the setting. Depending on the programme selected, the display shows the following values: - (spin off) - 400 - 600 - 1000 - 1200 - 1400.

4

Soil Level selector button



Level 1 - for lightly soiled clothing. Compared to level 2 (standard), the appliance takes approximately 8% less water, the duration of the washing phase is approximately 10 min. shorter, the temperature setting is not changed.



Level 2 - standard spin speed, designed for washing medium soiled clothing. Default programme values are applied.



Level 3 - for heavily soiled clothing. Compared to level 2 (standard), the appliance takes the same amount of water, the duration of the washing phase is approximately 10 min. longer, the temperature setting is not changed.

Programmes	Soil level	Default setting	Available levels	
Cotton	Option	Level 2	Level 3	Level 1
Eco 40-60	Option	Level 2	Level 3	Level 1
Cotton 20	Option	Level 2	Level 3	Level 1
Synthetics	Option	Level 2	Level 3	Level 1
Wool	Option	Level 1	Level 2	Level 3
Duvet	Option	Level 1	Level 2	Level 3
Rinse	-	Level 1	-	-
Allergy Safe	Option	Level 1	Level 2	Level 3
Spin	-	Level 1	-	-
Super Rapid 15'	-	Level 1	-	-
Fast 60'	Option	Level 2	Level 1	-
Gentle Dry	-	Level 1	-	-
Cotton Dry	-	Level 1	-	-
Quick Wash & Dry	-	Level 1	-	-
Cotton Wash & Dry	-	Level 1	-	-

5

Soil Level selector button

Pre-wash selector button / Extra Rinse selector button

a). The **Pre-wash** function is not available for all programmes (see Table of wash programmes).

The **Pre-wash** function extends the wash cycle by approximately 25 minutes. The laundry is prewashed before the main wash cycle begins. Use the **Pre-wash** to achieve excellent washing results without the need to soak the laundry. Pre-wash is recommended when washing heavily soiled laundry. Pre-wash will be performed at 30°C.

Note! Pour suitable detergent to detergent drawer marked with "1" symbol before the **Pre-wash** function is activated.

b). Extra Rinse

The function is especially useful when washing underwear and also clothes for people with sensitive skin. If you select this function, there will be 1, 2 or 3 extra rinses depending on customer's preferences, achieving better rinsing results.

c). The **Allergy Safe** programme is especially recommended for washing children's clothing and for people with sensitive skin. Select this option to add an extra rinse to wash cycle. Additionally, during all stages of rinsing water is heated to 30°C.

Touch the  symbol button until you see the  symbol to activate the anti-allergic additional function.

Note: If the  symbol is not displayed on the screen when you want to select the anti-allergic additional function, it means that the washing programme you selected does not use this feature.

Dry level selector button

- When you select the drying time the appliance will dry the laundry with hot air at the end of the washing phase. Select the drying time by pressing the button repeatedly. The time depends on the amount of the laundry, type of fabric and moisture content.

You can select the drying level you desire by touching the drying level selection button.

Level 1 “”, Level 2 “”, Level 3 “” symbols shall be displayed on the display of your appliance when you press the drying level button.

Level 1 “”: Recommended for laundry that will be ironed before using.

If you would like to select the “” feature, press the drying level button until you see the “” symbol on the display.

Level 2 “”: Recommended for laundry that requires hanger drying.

If you would like to select the “” drying feature, press the drying level button until you see the “” symbol on the display.

Level 3 “”: Recommended for laundry that will be folded and put to the wardrobe after the end of the program. If you would like to select the “” drying feature, press the drying level button until you see the “” symbol on the display.

Note: If no change occurs when you touch the drying level button, this means there is no drying level selection in the programme you have selected.

If you want to apply duration drying to your laundry at the end of the washing;

You can select the drying duration you want by touching the level-drying button.

When you touch the level-drying button, the screen of your machine will display level 1 “”, level 2 “”, level 3 “” symbols.

If you keep touching you will see the duration-drying (30 mins, 60 mins, 120 mins) options on the screen. You can select the drying duration you desire.

Note: If the 30 mins, 60 mins, 120 mins durations do not appear on the screen when you want to select the duration drying feature, it means this drying feature is not used for the washing program You have selected.

SPECIAL PROGRAMMES

Eco 40-60

- The “eco 40-60” program is used to wash normally soiled cotton items that can be washed together at 40 °C or 60 °C in one cycle.

Cotton 20’:

- Washing colored clothes can preserve colors better.

7

Delay Start button

- **Start Delay** specifies the delay in hours until the programme will start. You can delay the wash cycle by 0,5-23 hours. Press and hold the button to set the time after which washing is to commence. Delay Start Indicator will flash until the programme starts.

8

START/PAUSE button

- Press Start/Pause to start or pause a programme. When paused, the Start/Pause indicator starts to flash.

The **Pause** mode can be used to soak the laundry. Once the selected programme started wait for about 10 minutes and then press the **START/PAUSE** button. When the laundry is soaked as required, press the **Start/Pause** button again to resume the program. Soaking will improve washing results for heavily soiled laundry.

You can **Pause** a programme to add laundry to the drum during the wash cycle. Press the **Start/Pause** button to add laundry to the drum during the wash cycle. After adding laundry close the door and press the Start/Pause button. The appliance will resume a wash programme.

Note: If you press the Start/Pause button and the door remains locked, it means the laundry cannot be added at this stage of the programme.

5+6

Child Lock

- This function locks function buttons to prevent settings being changed or operation interrupted by children. The function is activated by simultaneously pressing and holding buttons (Option) and (Dry Level) for approx. 5 seconds (the display will show an indicator by the symbol and CL symbol will flash). To release the Child Lock, hold the same buttons down once more for around 5 seconds.

NOTE: Turning off or unplugging the washing machine does not deactivate the Child Lock.

NOTE: If you press any button or change the position of the selector knob, the CL symbol will flash.

USING THE APPLIANCE

I. Select Programme

1. Set the programme selector knob to the desired programme (see the table further on).
2. Change temperature, spin speed or activate available additional functions to modify the programme to your individual needs.
3. Press the [Start/ Pause] button once door lock is engaged, the programme will start after about 6 seconds.

II. Start delay setting

The delayed start function may be used when, for example, taking advantage of discounted energy tariffs.

Procedure:

1. Close the door.
2. Set the programme selector knob to the desired programme (see the table further on).
3. Select additional functions and wash or/and dry cycle parameters as required.
4. Press the Delay Start button .
5. Select the wash cycle time 0,5-23h.
6. Press the [Start/ Pause] button. The appliance will be set in delay mode.
Washing will commence immediately after the delay time has elapsed.

III. End of the wash cycle

1. The **END** indicator will flash when the wash cycle completes.
2. Turn off the water valve
3. Set the programme selection knob to .
4. Unplug the appliance from the mains.
5. Open the door and remove laundry.

IV. Cancelling and changing programme

Set the programme selector knob to  position for several seconds to terminate a programme. Then select the desired wash programme.

TROUBLESHOOTING

Problem	Probable cause/Solution
The washing machine is not working	<ul style="list-style-type: none"> - Turn the tap on - Clean the mesh filter on the supply hose - Close the door - Press the [Start/ Pause] button
Water leaks	<ul style="list-style-type: none"> - Properly connect the water intake.
The load in the appliance has not been spun	<ul style="list-style-type: none"> - Replace the load evenly in the drum, clean the pump filter.
Unpleasant smell in the drum	<ul style="list-style-type: none"> - Run a hot wash cycle with detergent and no load
No water in the drum	<ul style="list-style-type: none"> - Turn on the water supply tap.
There is water left in the fabric softener container.	<ul style="list-style-type: none"> - Firmly press the button in the middle compartment
Washing not properly rinsed	<ul style="list-style-type: none"> - Add correct amount of detergent, depending on how dirty the washing is and the hardness of the water (see the instructions on the detergent's packaging). - Clean the pump filter
The appliance does not fill with water	<ul style="list-style-type: none"> - Turn on the water valve - Check the programme setting - Check the water pressure - Reconnect the water supply hose. - Close the door - Check the water intake is not bent or blocked
Simultaneous intake and draining of water.	<ul style="list-style-type: none"> - Check that the end of the drain hose is higher than the level of the water in the appliance (the hose should be at a height of 0.6m-1m)
Water does not drain properly	<ul style="list-style-type: none"> - Check the pump filter - Check the drain hose - Check the height of the drain hose, which should be 0.6-1 m from the bottom of the appliance.
Appliance vibrating	<ul style="list-style-type: none"> - Check the transport safety devices have been removed - Level the appliance - Secure the legs (tighten the nuts)
Foam from the detergent drawer.	<ul style="list-style-type: none"> - Reduce the amount of detergent used - Check the water hardness and amount of detergent used, as well as the type of detergent used in the drum
The operation of the appliance is interrupted before the programme has finished	<ul style="list-style-type: none"> - Check power supply, water supply and water outlet
Noise caused by operation of the outlet pump after water is removed	<ul style="list-style-type: none"> - The water has been removed from the drum, but small amounts remain in the pump and outlet lead Constant operation of the outlet pump causes air to be sucked in leading to the characteristic noise, which does not mean that anything is wrong.
Short breaks during the wash cycle	<ul style="list-style-type: none"> - The water in the appliance is being automatically refilled - Pause caused by removal of excess foam
The laundry is not dried or poorly dried	<ul style="list-style-type: none"> - too big a load – reduce the load in accordance with the table - wait for about 15 minutes and resume drying

MAINTENANCE AND CLEANING



Never clean the appliance body or plastic parts using solvents or harsh, abrasive detergents (e.g. washing powders or creams)! Use mild liquid detergents and soft cloths only. Do not use sponges.

1

Clean the pump filter

- Clean the pump filter every 20 washes or so. Neglecting to clean the filter may result in problems with draining water from the appliance!



Unplug the appliance from the mains,
Turn off the water valve,
Open the filter cover by hand or
using a flat-head screwdriver.



Unscrew the filter.




Remove and clean the filter.

2

Clean the water supply valve


- Replace the filter following the procedure in reverse order.

Washing the filter in the tap

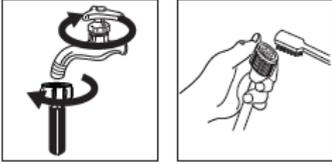

1. Close the tap.
2. Remove the water supply hose from the tap.
3. Clean the filter.
4. Reconnect the water supply hose.

Washing the filter in washer dryer:

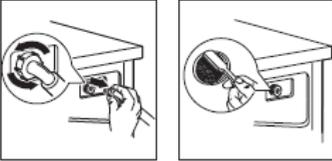

1. Screw off the inlet pipe from the backside of the machine.
2. Pull out the filter with long nose pliers and reinstall it back after being washed.
3. Use the brush to clean the filter.
4. Reconnect the inlet pipe.

3

Clean the detergent drawer

- Should be cleaned at least once a month.



- 1). pull out the dispenser drawer with press the A.
- 2). clean the dispenser drawer under water.
- 3). clean inside the recess with an old toothbrush.
- 4). insert the dispenser drawer

PRACTICAL TIPS ON WASHING

DETERGENTS AND LAUNDRY ADDITIVES




It is recommended to use a general-purpose laundry detergent powder or liquid for the full range of temperatures according to the manufacturer's instructions on the detergent packaging.

1

Detergents

- Pour the detergent into the drawer compartment marked **I**
- Pour the pre-wash detergent into the drawer compartment marked **II**

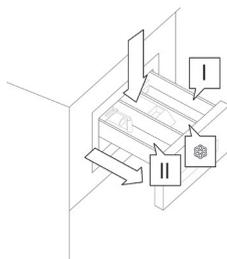

2

Liquid detergents

- Install the tab supplied in the compartment **II**
- Pour liquid detergent into the drawer compartment marked **II**

3

Fabric softeners added to the rinse

- Pour the fabric softener into the drawer compartment marked **III**
- Do not exceed the maximum level marked on the drawer compartment. This detergent will be used for the final rinse.



For washing whites it is recommended to use the washing powder. Liquid detergents do not contain bleach. Do not use rinse aid with white laundry, as this may cause yellowing of laundry.

FIRST WASH

- Before washing for the first time, put the appliance through one high temperature cycle without a load, according to the following procedure:
 - 1). connect the appliance to the power supply,
 - 2). open the water valve,
 - 3). set the programme selector dial to washing at high temperature, add a suitable detergent and press Start/Pause.

SOIL

1

Stubborn stains

- Before washing underwear, apply an additional stain remover according to the instructions for use.

2

Heavy soil

- in order to achieve a better result, wash less laundry,
- add more detergent.
- rinse the appliance after washing heavily soiled garments (e.g. work clothes) or clothing that loses fibres. To do this, run the wash cycle at 60°C, for example coloureds or easy-care.

3

Light soil

- See Conservation.

CONSERVATION

Reduce energy and water consumption

- Garments which are only lightly soiled should be washed on the Rapid Wash setting.
- For most programmes, the appliance detects load. For partial load, when using the QUICK programme, the appliance will reduce water and energy consumption and shorten the wash cycle.
- The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.
- Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.

WATER HARDNESS

- Hard water causes scale deposition. Information about water hardness is available from the nearest water works. We recommend that you use water softener for each washing.

POWER OUTAGE (PROGRAMME MEMORY)

- Power outage or unplugging the appliance does not cancel the set programme. The programme is memorised and resumes when power is restored. Do not open the appliance doors during a power outage.

LOAD

- Maximum drum capacity (washing) 8 kg.
- Maximum drum capacity (drying) 6 kg.
- Load the laundry into the drum according to the following instructions:
 - 1). cotton, denim, children's clothes - max full drum (do not force clothes into the drum as this will reduce the quality of the wash),
 - 2). synthetics - max ½ of the drum,
 - 3). wool, silk, delicate fabrics - 1/3 of the drum.



Do not overload the appliance. Overloading the appliance may damage the clothes being washed! If you overload the appliance the OVL is shown appears on the display – remove excess laundry from the drum and restart the appliance. The maximum load amounts depending on the programme are given in table of programmes.

LOAD DISTRIBUTION CONTROL

- The appliance features load distribution control system. Before spinning, this checks the distribution of clothes inside the drum. In the event that too great an imbalance is detected, the system makes several attempts to rearrange the clothes inside the appliance. Sometimes these attempts to distribute the load are not successful. Problems may be caused by terrycloth robes washed together with other types of laundry, such as bed sheets that formed a bundle around other items of laundry.
- The system may then respond in two ways:
 - 1). accept the uneven distribution of garments and reduce spin speed,
 - 2). cancel the spinning.

In either case, after washing cycle is finished open the appliance door, remove the laundry by hand, close the door and select the spin setting again.

DOOR LOCK

- The appliance is equipped with a lock which prevents the door from being opened during wash cycle. Once a wash cycle is complete, the door lock is automatically released. In order to open the door during the wash program, press PAUSE button and wait to unlock the door.



If the temperature inside the drum is high, the door may remain blocked until the water temperature has dropped below 60°C.



Before opening the door of the washing machine check whether there is water in the drum.

DELICATE FABRICS

1

Select Programme

- Select the appropriate wash programme: Synthetics, Wool.

2

Load

- Avoid overloading the appliance – the maximum load is 1/3 kg for delicate fabrics, see "Loading."

ADD DETERGENT

1

Not enough detergent

- the laundry turns grey, lumps of fat form, lime scale is deposited.

2

Too much detergent

- A lot of foam, ineffective washing, detergent incompletely rinsed from fabrics.



Amica

 Service Help Line

For the UK: please call
01949 862012

For Ireland: please call
0818 46 46 46 (non-geographic number)
or **01 88 2010** (standard rate call)